



label creation for ODP 200 or TEAC P-55

1.1 Labeldesigner

Please start Label Designer for label creation:

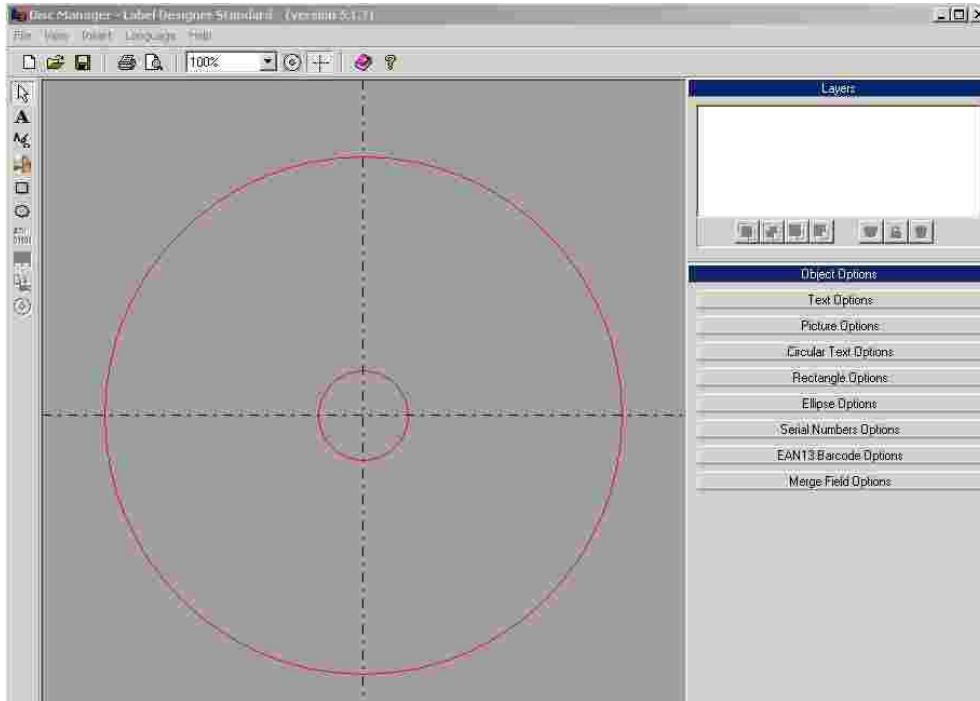


To create a new template, click on **file->new**. The next window appears. Please choose again „new“.

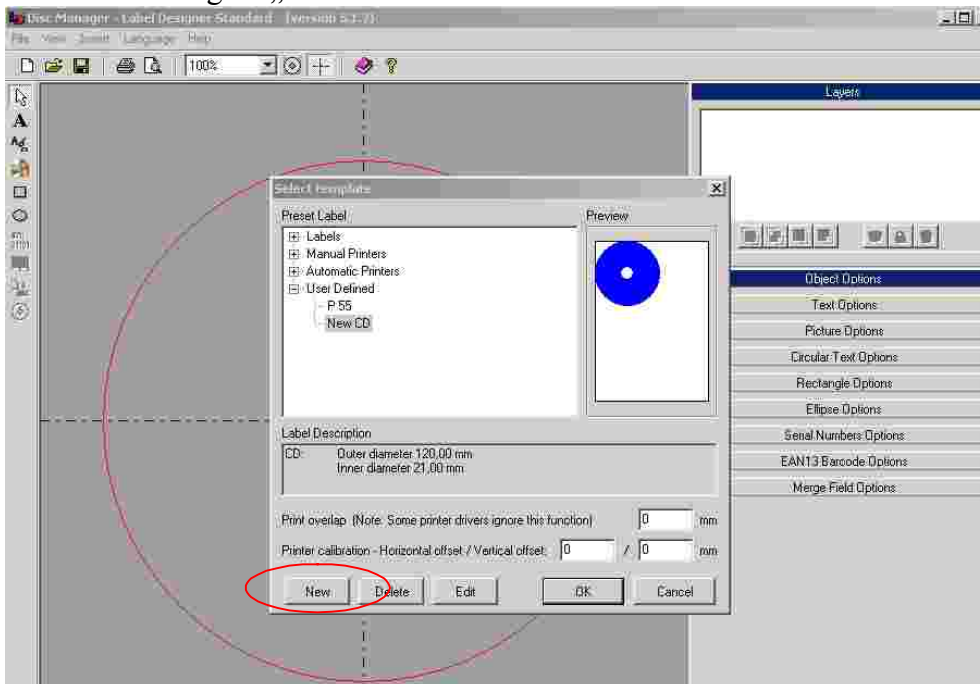


1.2 edit template


Enter the name for the new template

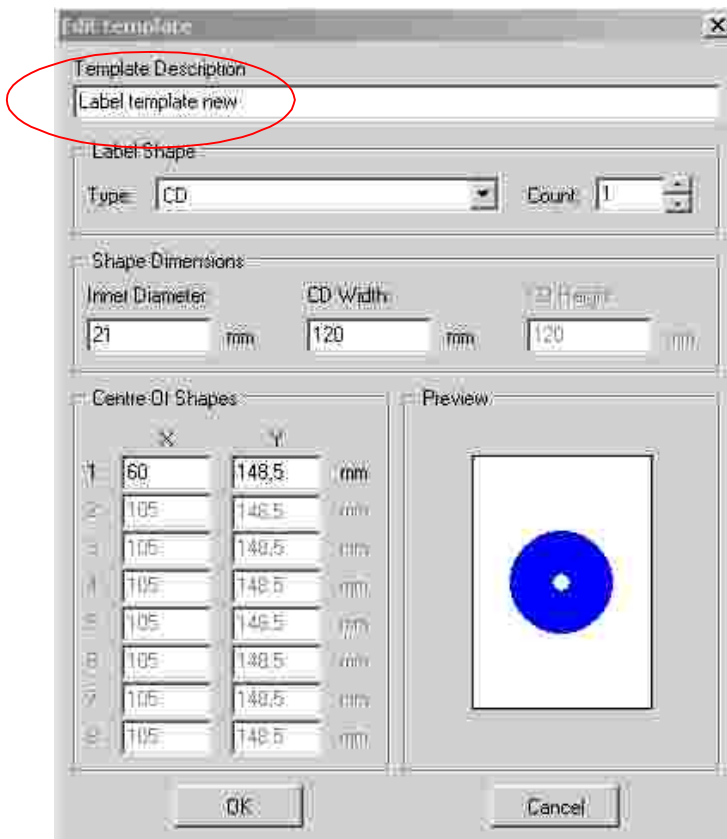

in the next step you have to specify the dimensions of the label depending on your CDs you have to change inner diameter and CD Width (**standard values for ODP 38/119 or 21/120 for P-55**).

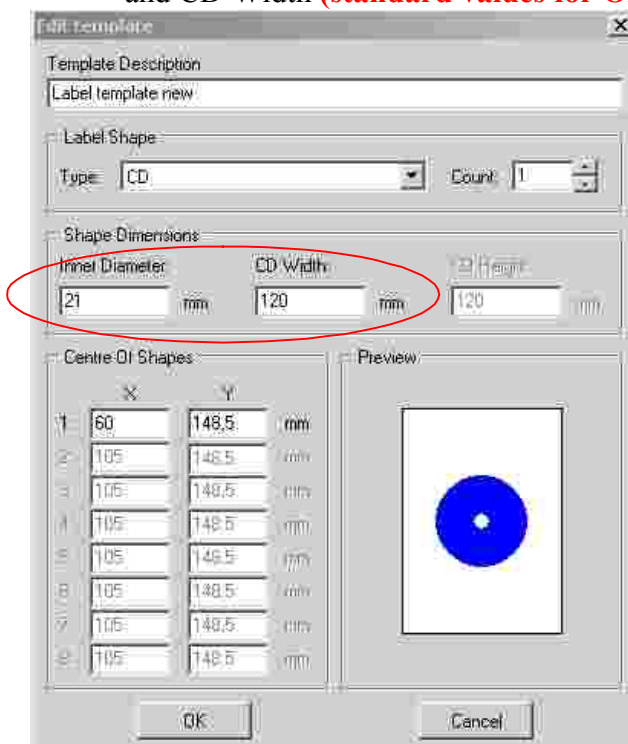



to get the print out in the right position you have to enter the values for X and Y 60/60 festgelegt.

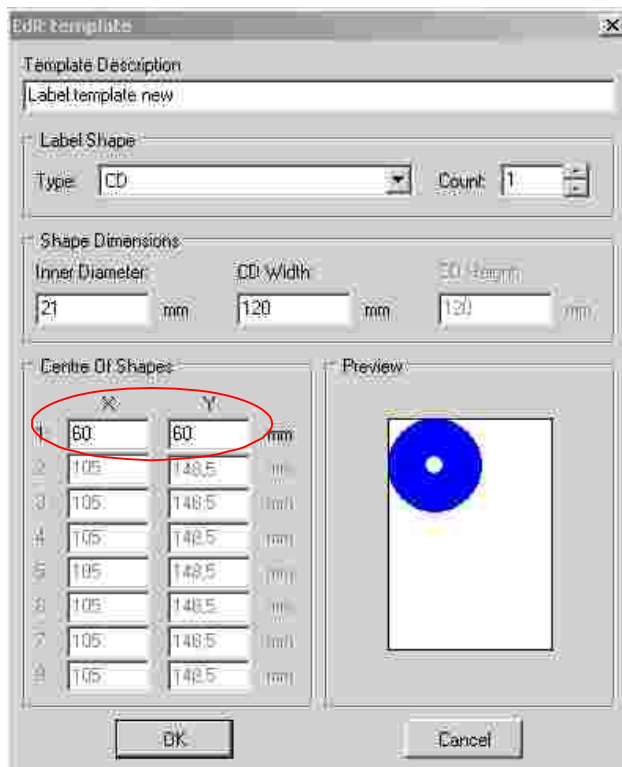


Now confirm with „OK“

1.3 Label creation with Label Designer


click once on the button "insert picture"- button and then on the template. Now an explorer window appears and you can choose a graphic file ("*.jpg" and "*.bmp" are supported formats).

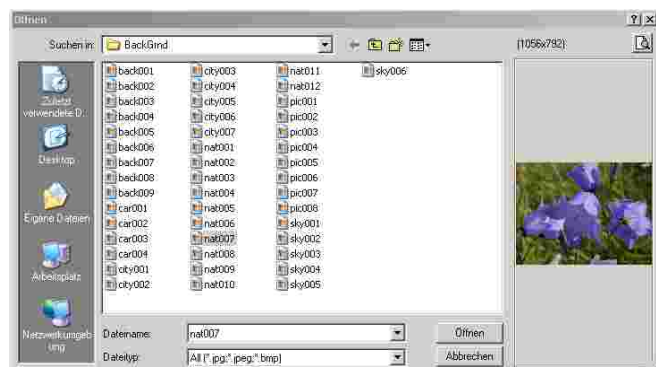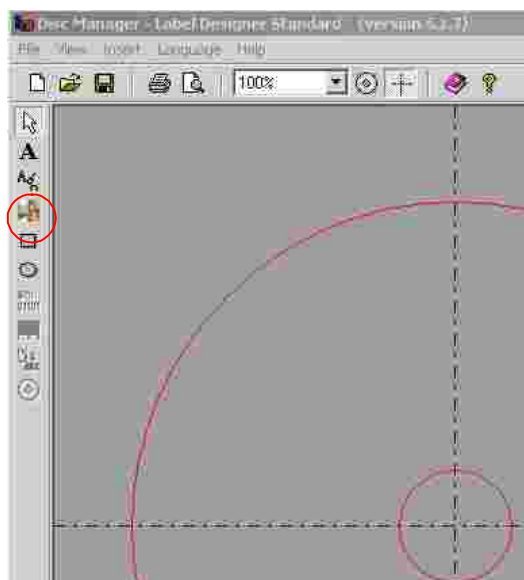

(In case of you want to insert a text field, click once on the button „insert text field“(“A”) and in the second step click on the template).

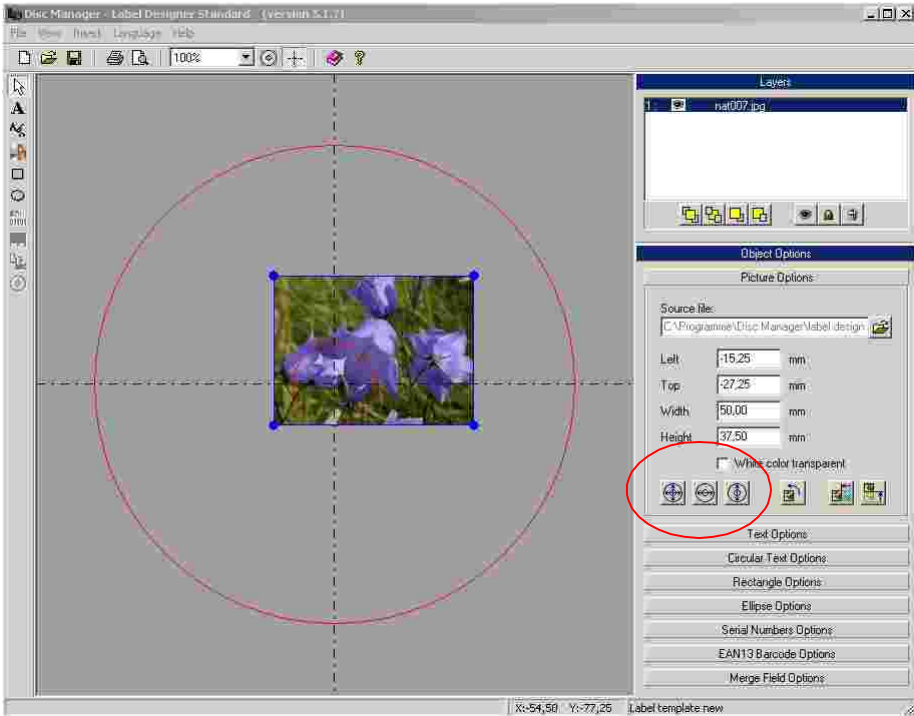


To center the picture on the template, please use the marked „centering buttons“. You can resize the picture also manually.

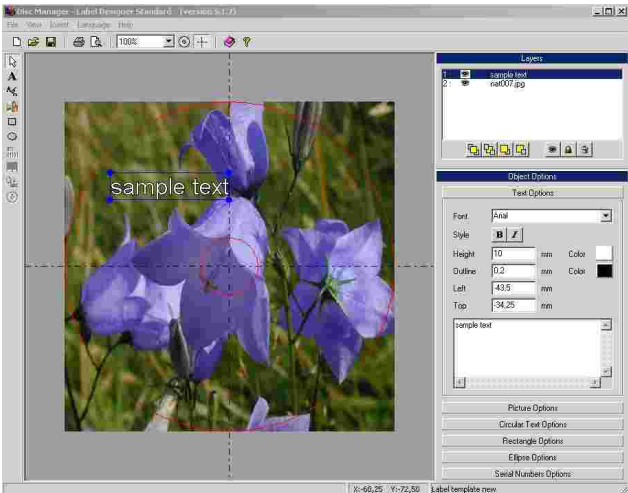


1.4 save a file

To save the file, just click on „File“ --> save
All LabelDesigner files will have the extension *.dml.

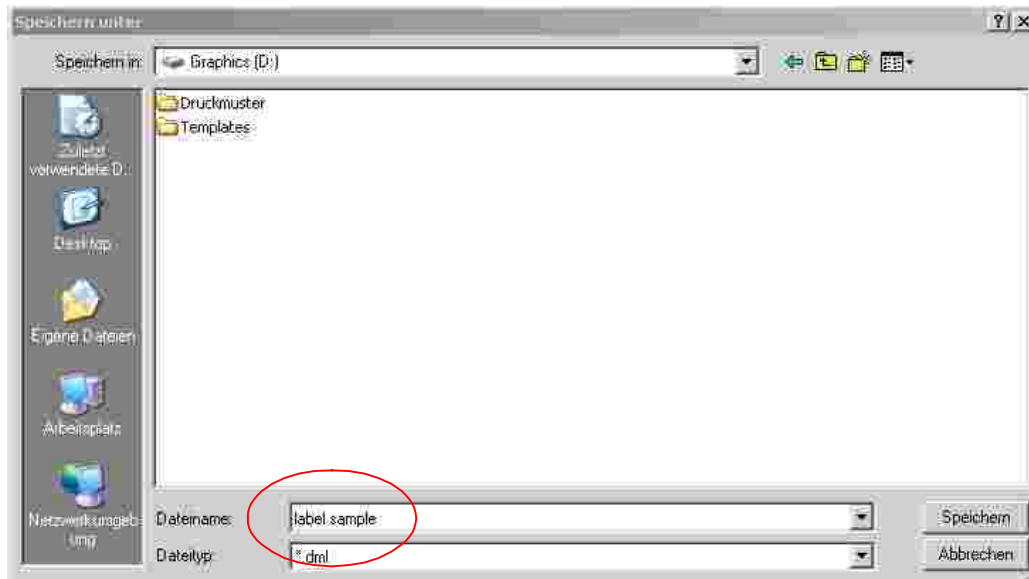

To create a prn-file you must click on "print"-Symbol and check the option "print to file". In the next Step you will be asked for the name of the output file. Please enter the full path and don't forget the extension *.prn !!!(e.g. C:\graphics\test.prn).

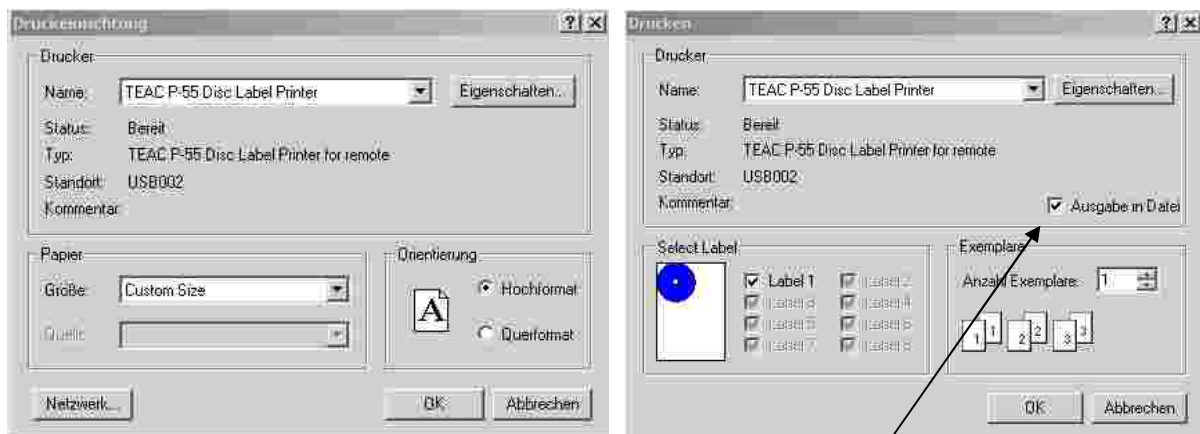

print to file must be checked

(print to file)

